 
 
 


PERSONALIZE YOUR NX10 AND MAKE IT YOURS

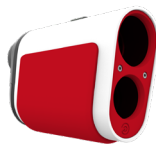

Choose from our ever-growing selection of custom designs and add your unique style to your NX10.

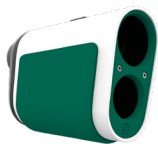

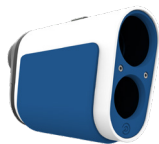

START YOUR
DESIGN COLLECTION

**BUY ONE.
GET ONE.**

USE CODE:*

STYLE

*Cannot be used with other discounts or offers.

WELCOME TO TEAM
 **PRECISIONPRO®**

**10%
OFF**

YOUR NEXT PURCHASE


precisionprogolf.com

USE CODE*




TEAMPRO10

 *Cannot be used with other
discounts or offers.

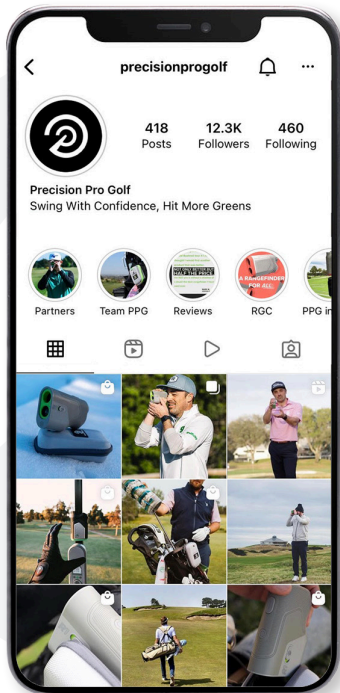



FOLLOW US ON SOCIAL

 precisionprogolf  preprogolf  precisionprogolf



Post a picture with your Precision Pro and tag us to be featured on our account.

 **PRECISIONPRO®**



NX10
PRODUCT MANUAL

PLAY WITH STYLE

 
EVERY GOLFER IS UNIQUE. NOW, YOUR RANGEFINDER CAN BE UNIQUE, TOO.



Visit precisionprogolf.com/personalize to add your own style to your NX10.
New designs and limited-editions are released every month.




PRODUCT OVERVIEW

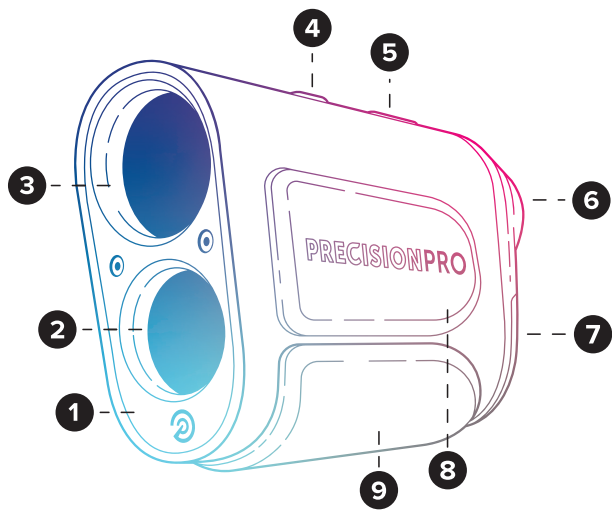


1. Front Plate
2. Laser Lens
3. Optical Lens
4. Slope Switch
5. Power/Laser
6. Adjustable Eyepiece
7. Battery Door
8. Magnetic Grip
9. Side Plate

 LASER SCREEN

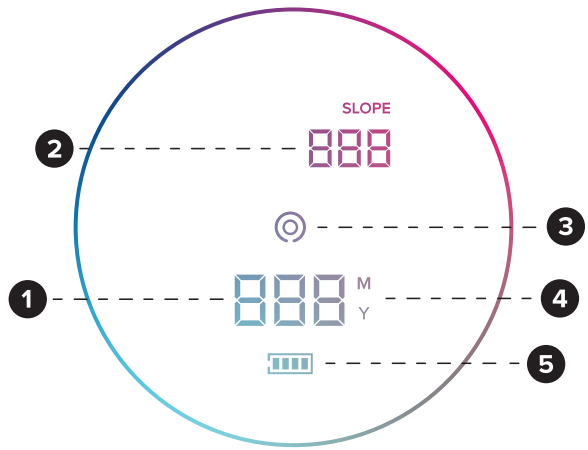


1. Non-Slope Distance
2. Slope Distance
3. Aiming Circle
4. Yards/Meters Indicator
5. Battery Indicator

 FRONT PLATE PERSONALIZATION

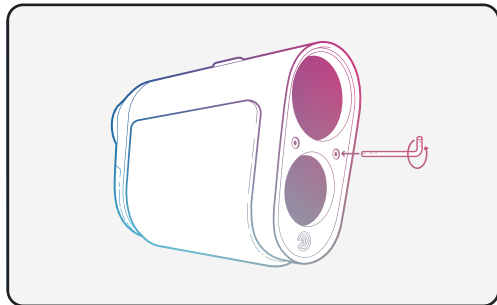

 
REMOVE FRONT PLATE: Use the included wrench and turn screws on front plate counterclockwise. Set screws aside and gently pull the front plate to remove.

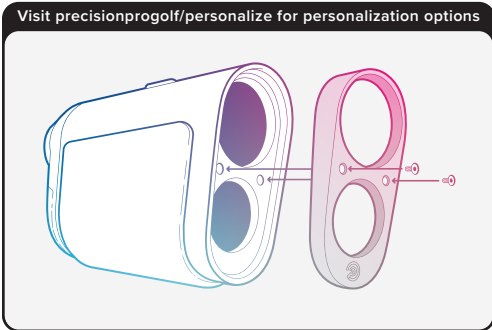

INSTALLING NEW FRONT PLATE: Attach new front plate and insert screws. Using the wrench, turn the screws clockwise to fasten the front plate into place.

Do not tighten the screws too tightly.

 SIDE PLATE PERSONALIZATION

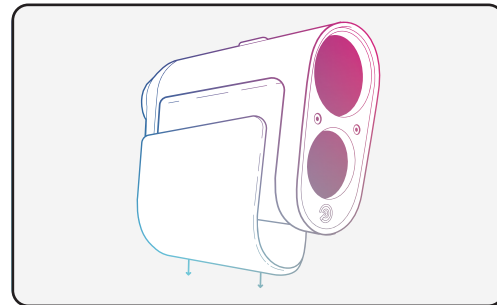


REMOVE SIDE PLATE: Pull down on the side plate to remove it from your NX10 rangefinder.




INSTALLING NEW SIDE PLATE: Slide the new side plate up into the grooves of the NX10

 HOW TO USE

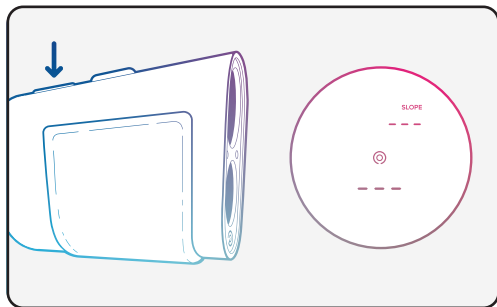


1. Look through the eyepiece and press the power button to turn on the rangefinder. The aiming circle will appear in the middle of the screen.

 7

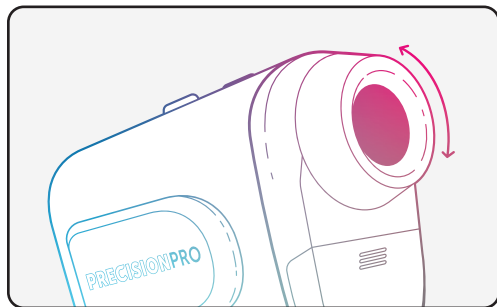


2. Rotate the dial left or right on the adjustable eyepiece until the display appears sharply focused.

 HOW TO USE

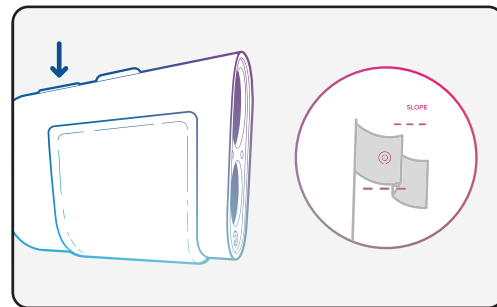

 
3. Point the aiming circle at the target -- flag, tree, bunker, etc. Then press and release the POWER button to "shoot your target."

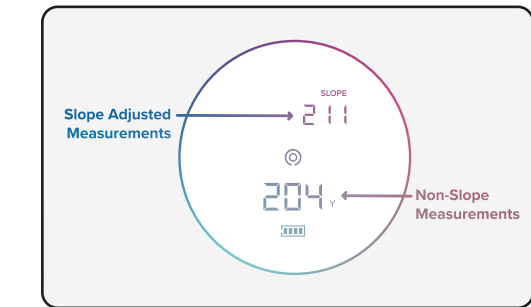


4. If slope is on, the slope-adjusted number will appear above the aiming circle. The non-slope number will appear below the aiming circle.

8

 HOW TO USE

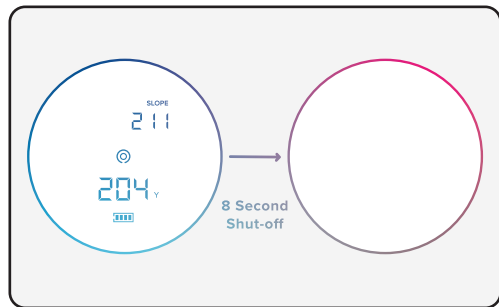


 5. The rangefinder will automatically turn off after eight seconds.

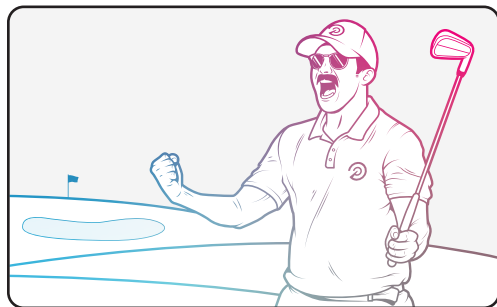

6. **Swing with Confidence!**

 
YARDS / METERS

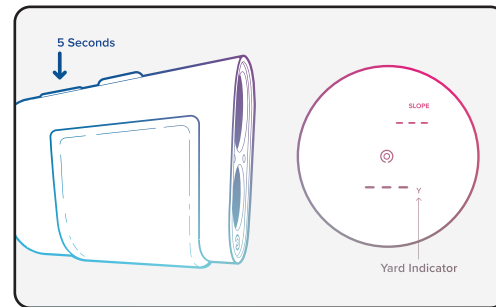


Make sure the screen is off, then press and hold the **POWER** button for five seconds to change between yards and meters. You will see a **Y** in the bottom right-hand corner for Yards and a **M** for Meters.

Y - Yards **M** - Meters

 SLOPE / NON-SLOPE

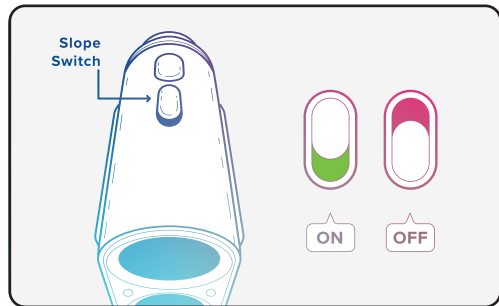


 1. Slide the slope indicator switch on the top of the rangefinder. Slope is activated when the green is visible. Slope is turned off when the green is not visible.

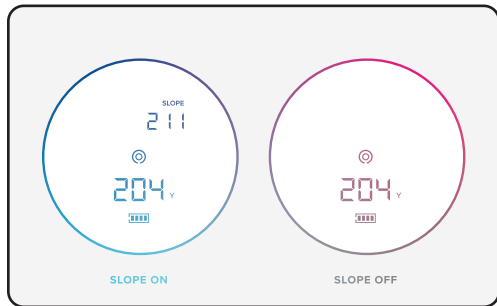


2. When slope is on, the slope-adjusted distance will appear above the aiming circle. When slope is turned off, the second display will not be shown.

 MAGNETIC CART MOUNT

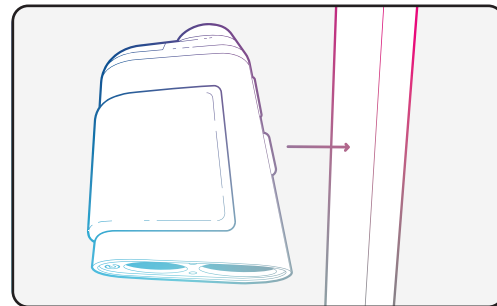


 1. The built-in magnetic cart mount will adhere to any flat metal surface. Attach the rangefinder so that the side plate is facing out.

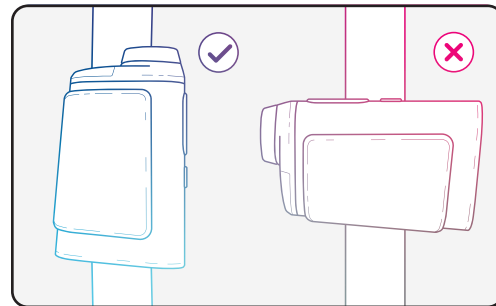


2. When attaching to a frame of a golf cart, make sure that the rangefinder is parallel with the bar. Not perpendicular.

 CHANGING THE BATTERY

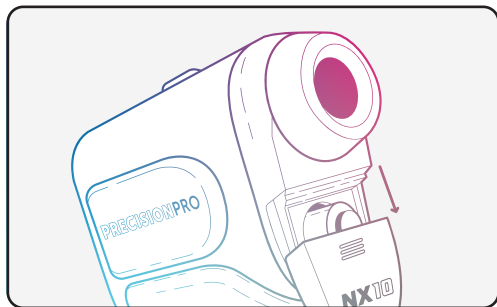


 1. Open the battery door by sliding the panel away from the eye piece.

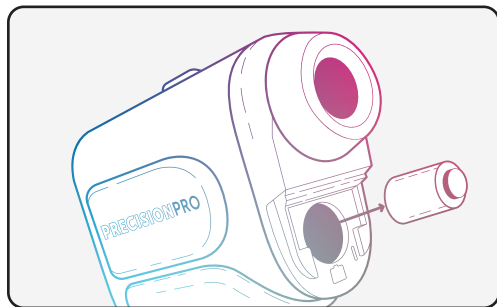


2. Remove the old battery and insert the new battery to match the image shown above. Put the battery door back on and secure tightly.

 CHANGING THE BATTERY

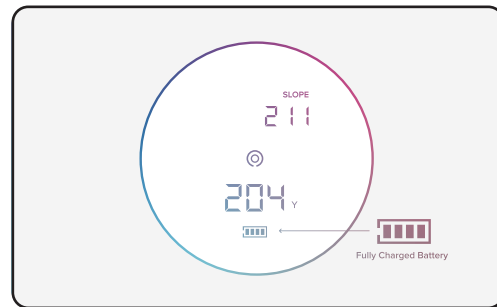


 3. Check the viewfinder to make sure the battery is fully charged and operating correctly.

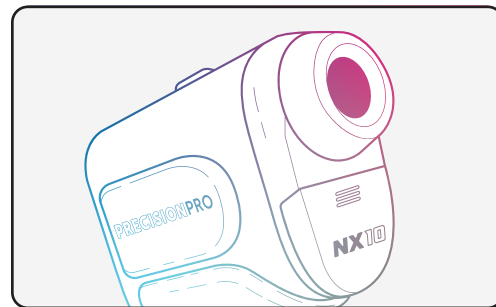


4. Double check that the battery door is on securely.

 BEST PRACTICES

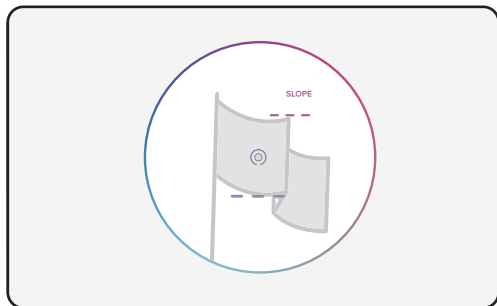

 
AIM DIRECTLY AT THE FLAG: For the best results, hold your rangefinder steady and hold the aiming circle over the flag as your rangefinder measures the distance.

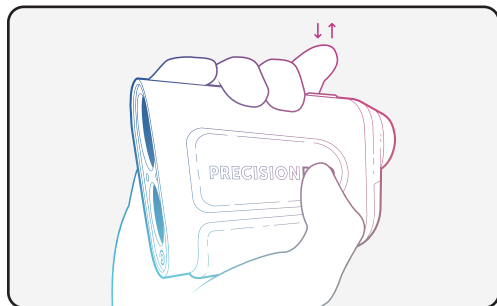


PRESS AND RELEASE: When measuring distances, it's important to press and then release the power button.

Holding the button will not work correctly.

 BEST PRACTICES

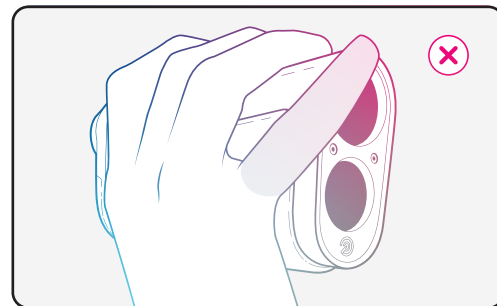

 DON'T COVER THE LENS: Make sure the front of the rangefinder is unobstructed. A finger or side of the palm will interfere with the laser and result in inaccurate measurements.

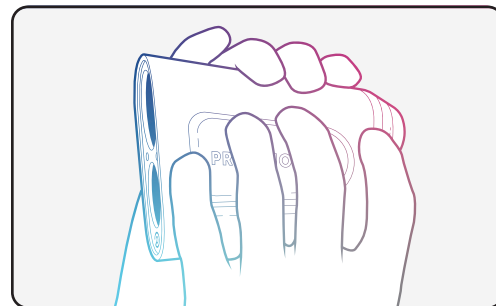

USE BOTH HANDS: Stabilize the rangefinder by using both hands and steady your arms by bracing them against your chest.

INDUSTRY-LEADING CUSTOMER SUPPORT

We believe that golf is enjoyed most when you're confident. And when everything else is made to measure, nothing else compares to Precision Pro.



REGISTER YOUR PRECISION PRO – precisionprogolf.com/register

It feels more like joining a club with lifetime benefits and exclusive offers on future products and our partners.



FREE BATTERY REPLACEMENTS* – precisionprogolf.com/free-battery

It's our way of saying thanks for choosing Precision Pro. Complete a short form when your battery is running low and we'll send you a new one for free.

*Only available in U.S.



TWO-YEAR WARRANTY

We're confident nothing will go wrong, but we'll make it right if it does. Our two-year manufacturer warranty covers any operational defects – no questions asked.



HONEST PRICING PROMISE

Confidence is a wonderful thing. Doubt is not. You can be confident when purchasing from Precision Pro. We price our products honestly and consistently. No clearance sales, no permanent sales, and no gimmicks.

REGISTER YOUR RANGEFINDER



EXCLUSIVE OFFERS

We partner with some of the biggest names in golf and share exclusive partner discounts on anything from golf apparel, equipment, and even lessons.



HASSLE FREE EXCHANGES

Should anything ever happen to your rangefinder, the exchange process is quick and easy. We go to great lengths to minimize time without a rangefinder by sending you a prepaid shipping label and shipping you a replacement.



TRADE-UP PROGRAM

Precision Pro has quickly become the most innovative rangefinder company in golf – and we have no plans on stopping. Our team of designers and engineers are working on incredible new products to help golfers play better and have more fun. We offer a 30% discount on new Precision Pro Golf products when you're ready to upgrade.

PRECISION PRO GOLF

INDUSTRY-LEADING CUSTOMER SUPPORT

✉ help@precisionprogolf.com

🌐 precisionprogolf.com/help

☎ (888) 568-6770