

# DOWNLOAD THE APP

---

Search the App Store or Google Play Store for the **Precision Pro Golf** app. Follow the instructions in the app to pair the R1 Smart Rangefinder and utilize advanced features like **MYSLOPE™**, Find My Precision Pro, and Wind Assist™.



Available on the  
**App Store**



GET IT ON  
**Google Play**






Available on the  
**App Store**



GET IT ON  
**Google Play**

Use the QR Code to download the  
**Precision Pro Golf** app.

Follow the instructions in the app to  
pair your R1 Smart Rangefinder.

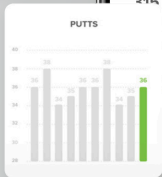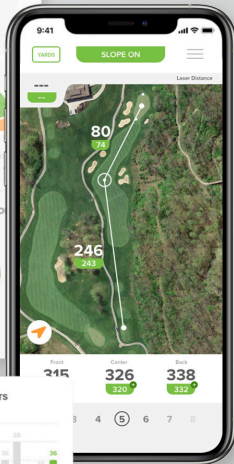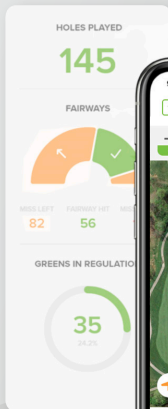



# THANK YOU

FOR CHOOSING PRECISION PRO

We believe golf is best played boldly, with the tools and tech that fit your style and your play.

Our revolutionary R1 Smart Rangefinder provides the smartest, most personalized distance measurements in the game.

**If it isn't personalized, it isn't precise.**



WRITE A REVIEW AT

[amazon.com/feedback](https://amazon.com/feedback)

AVAILABLE AT

The Amazon logo, consisting of the word 'amazon' in a lowercase sans-serif font with a curved arrow underneath it pointing from 'a' to 'z'.

# 10% OFF

YOUR NEXT PURCHASE  
OR SHARE WITH A FRIEND

USE CODE

**THANKS10**

[precisionprogolf.com](http://precisionprogolf.com)



# R1

**PRODUCT MANUAL**



# DOWNLOAD THE APP




Available on the  
**App Store**



GET IT ON  
**Google Play**

This product works best when paired  
with the **PRECISION PRO GOLF** app.

Please use the QR Code above to  
download the app and pair it with  
your rangefinder.

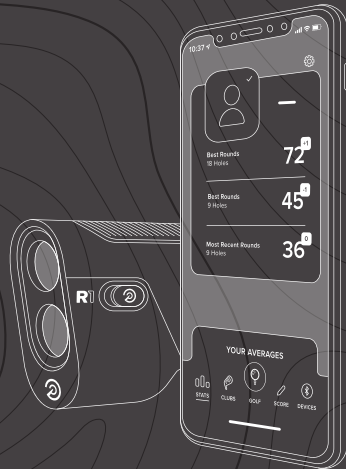


# myslope™

The first-ever personalized slope calculation that creates an adjusted distance specific to you and your environment in the moment.

- Launch angle
- Temperature
- Ball speed
- Altitude
- Spin rate
- Humidity


**MYSLOPE™** is a game-changing level of accuracy applied to every course, club, and swing to give you a number that's specific to you -- and no one else.

**IF IT ISN'T PERSONALIZED, IT ISN'T PRECISE.**

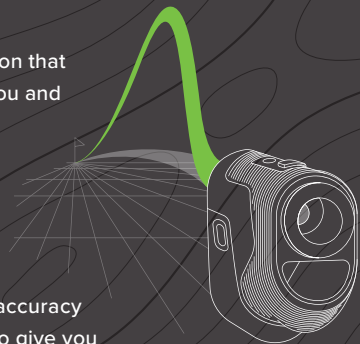


## PRODUCT OVERVIEW

1. Laser Lens
2. Optical Lens
3. Magnetic Grip
4. Mode/Screen Button
5. Power/Laser/Bluetooth Connect Button
6. Adjustable Eyepiece
7. Charging Port / Bluetooth Indicator
8. Slope On/Off Switch

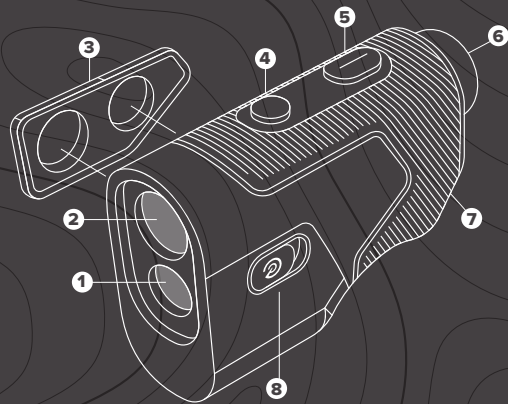


# LASER SCREEN

1. Non Slope-Adjusted Laser Distance
2. Aiming Circle
3. MYSLOPE™ Indicator
4. Slope Adjusted Distance
5. Wind Assist™
6. Yards/Meters Indicator
7. Battery Level

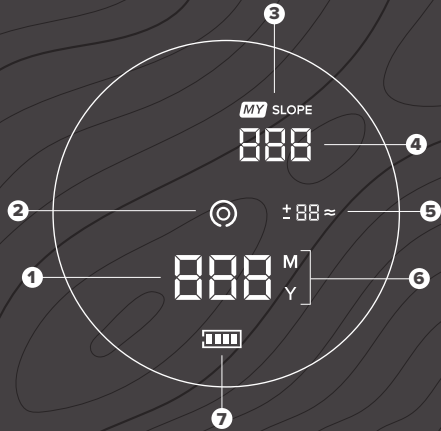

# GPS SCREEN

1. Center-of-Green Distance
2. Front-of-Green Distance
3. MYSLOPE™ Indicator
4. Back-of-Green Distance
5. Hole Number
6. GPS Indicator
7. Bluetooth Indicator

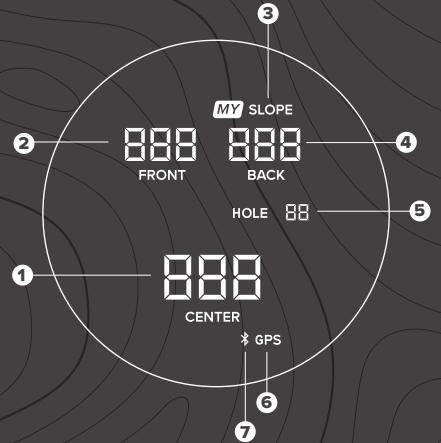





## RANGEFINDER QUICKSTART GUIDE



**1:** Download the **PRECISION PRO GOLF** app from the Apple App Store or the Google Play Store.

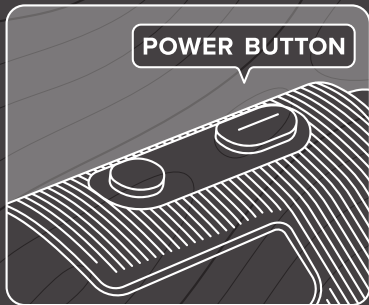


**2:** Turn on the rangefinder by pressing the **POWER** button.

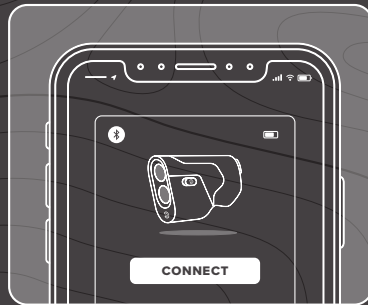


**3:** Open the Precision Pro Golf app, go to the devices tab, and follow the pairing instructions to connect your R1 Smart Rangefinder.

## RANGEFINDER QUICKSTART GUIDE

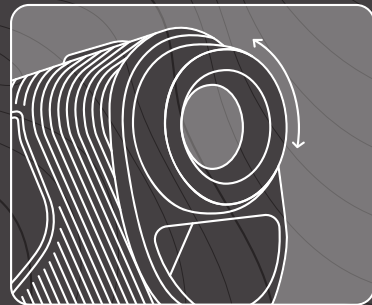

**4:** Rotate the dial left or right on the adjustable eyepiece until the display appears sharply focused.


## RANGEFINDER QUICKSTART GUIDE

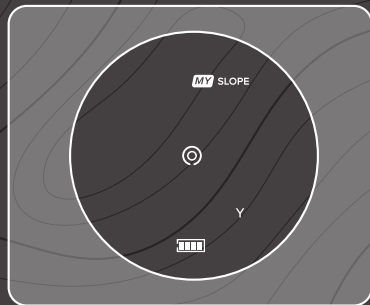

**5:** Point the aiming circle at the target -- flag, tree, bunker, etc. -- then press the **POWER** button to “shoot your target.”




**6:** The distance will appear on the screen.

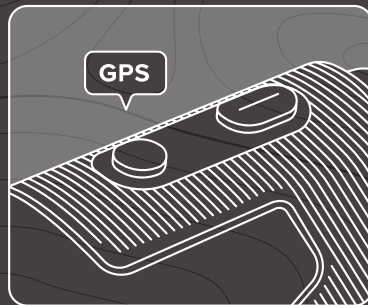

**7:** Press the **MODE** button to see the Front-Center-Back measurements on the GPS Screen.


*(Press the **MODE** button again to return to the Laser Screen.)*

## RANGEFINDER QUICKSTART GUIDE

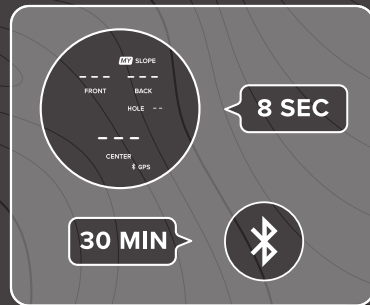

**8:** The Rangefinder's Screen will turn off after 8 seconds of inactivity. The bluetooth connection will disconnect after 30 minutes of inactivity.


## SCREENS

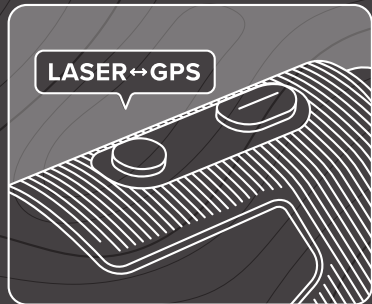

**1:** Press and release the **MODE** button to switch between the Laser Screen and the GPS Screen.



**2:** If a round of golf has been started in the Precision Pro Golf app, the GPS distances to the Front, Center, and Back of the green will appear on the GPS Screen.

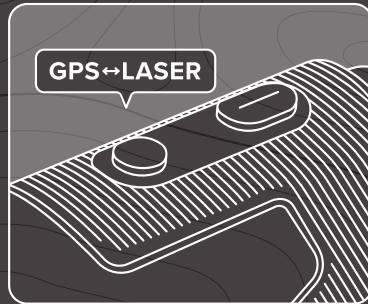

**3:** Press and release the **MODE** button again to switch the display back to the Laser Screen.

## SCREENS

## YARDS / METERS




1: Ensure your rangefinder is on the Laser Screen (*Screen 1*).




2: Press and hold the **MODE** button for six seconds until the Yards/Meters indicator changes from Y to M, or vice versa.

## SLOPE SWITCH

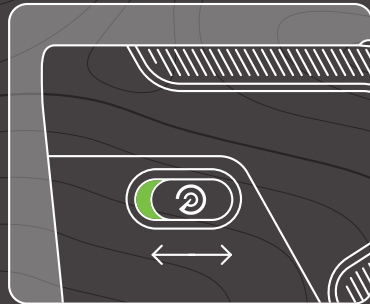

1: Slide the Slope Indicator switch on the side of the rangefinder forwards or backwards to turn slope on and off.

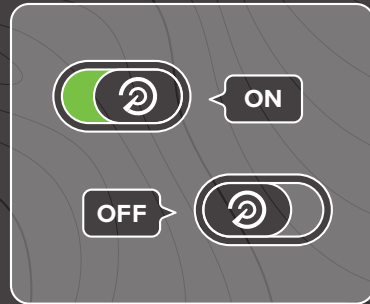


2: Slope is activated when the green is visible. Slope is turned off when the green is not visible.


## FIND MY PRECISION PRO



1: Open the Precision Pro Golf app and go to the DEVICES tab.

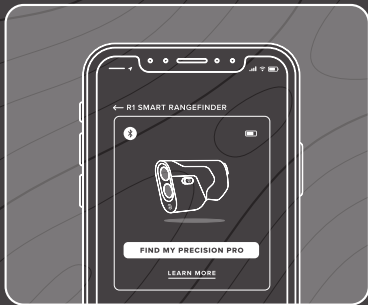

2: Under the R1 Smart Rangefinder, select “Find My Precision Pro.”

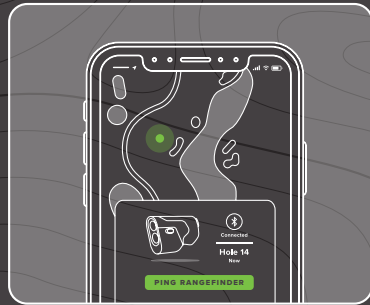

3: The screen will show the location where you were last connected to your rangefinder.

## FIND MY PRECISION PRO




\* **Please note:** you will need to have first connected you R1 and will need to have cell service for the feature to function properly.

## WIND ASSIST™




**1:** Ensure your rangefinder is on the Laser Rangefinder Screen (*Screen 1*). Real-time wind data from our app is calculated before each shot.

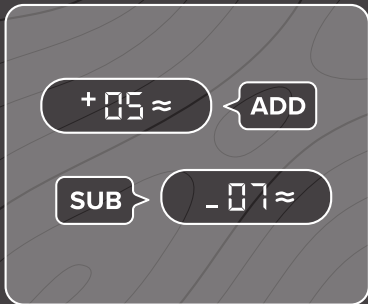

**2:** A plus-sign (+) signifies the number of yards to **ADD** to your distance. A minus-sign (-) signifies how many yards to **SUBTRACT** from your distance.

## CHARGING YOUR RANGEFINDER

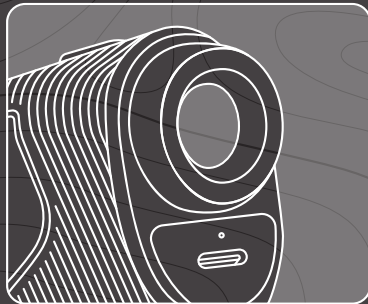

**1:** Your R1 Smart Rangefinder includes a USB to USB-C charging cable.



**2:** Plug the charging cable into the port on the rangefinder located underneath the adjustable eyepiece.

# PRECISION PRO GOLF

INDUSTRY-LEADING CUSTOMER SUPPORT

---

✉ [help@precisionprogolf.com](mailto:help@precisionprogolf.com)

🌐 [precisionprogolf.com/help](https://precisionprogolf.com/help)

📞 (888) 568-6770