




PRODUCT MANUAL

NX7 PRO SLOPE GOLF RANGEFINDER

PRODUCT OVERVIEW



- 1 - Laser Lens
- 2 - Optical Lens
- 3 - Power/Laser/Mode Button
- 4 - Adjustable Eyepiece
- 5 - Battery Door

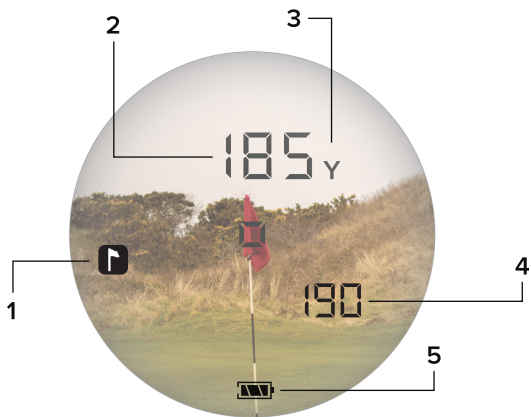

1 - Target Acquisition Indicator


2 - Distance

3 - Yards/Meters Indicator (Y - Yards M - Meters)


4 - Slope-Adjusted Distance

5 - Battery Indicator


HOW TO USE

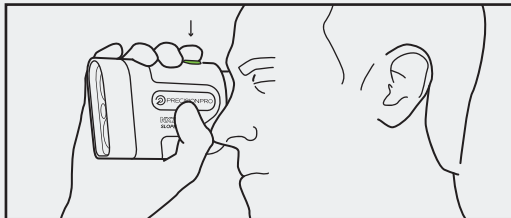


1. Look through the eyepiece and press the green power button to turn on the rangefinder. The crosshair will appear in the middle of the screen.

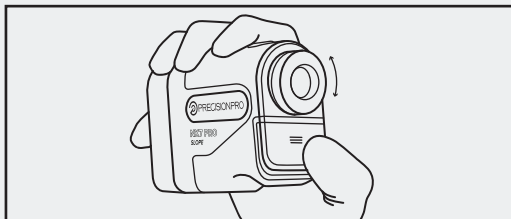


2. Adjust the focus of the rangefinder by rotating the dial left or right until the display appears sharp.

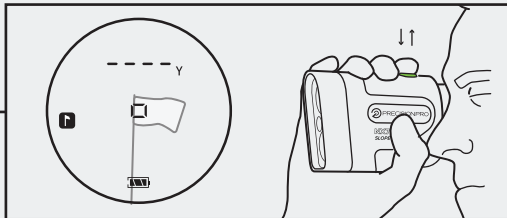


3. Point the crosshair at the target – flag, tree, bunker, etc. Then press and release the green POWER button to “shoot your target.”

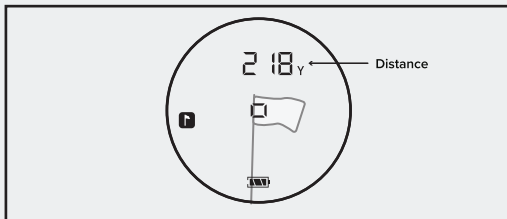

4. The distance will appear above the crosshair.

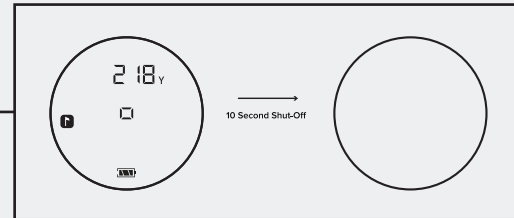


5. The rangefinder will automatically turn off after 10 seconds.

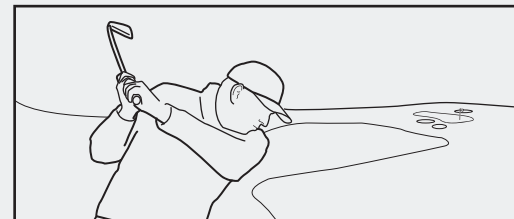


6. Swing with confidence!

YARDS/METERS

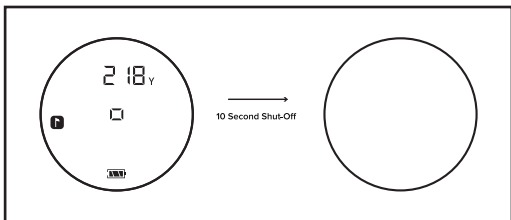


1. Wait for the display to turn off. You shouldn't see any images on the screen.

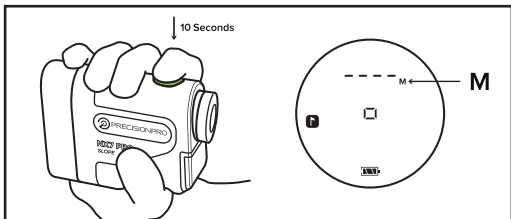


2. Press and hold the green **POWER** button for ten seconds to change between yards and meters.


TOGGLE SLOPE ON OR OFF

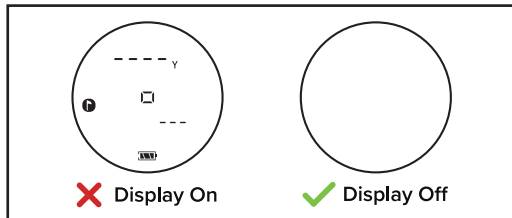

1. Wait for the display to turn off. You shouldn't see any images on the screen.

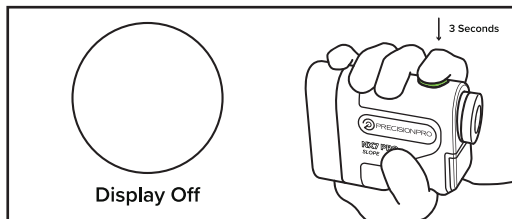


2. Once the display is blank, press and hold the power button for three seconds. After three seconds, release the button.

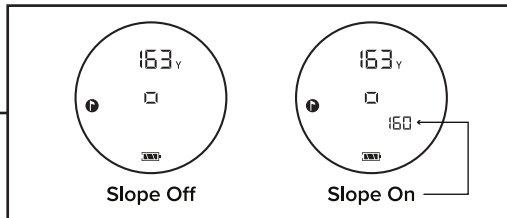


3. When slope is off, you will only see one distance that appears in the top half of the display. When Slope is turned on, you will see two distances.

The top number is the non-slope measurement and the bottom number is the slope measurement.


CHANGING THE BATTERY

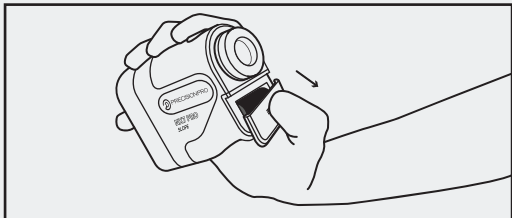


1. Open the battery door by sliding the panel away from the eye piece.

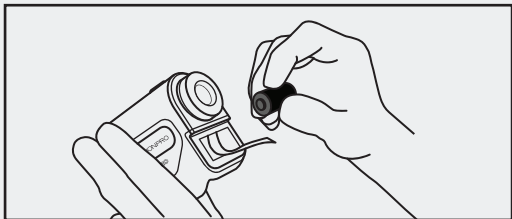

2. Remove the old battery and insert the new battery to match the image shown inside. Put the battery door back on and secure tightly.

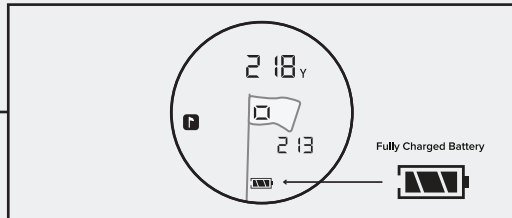


3. Check the viewfinder to make sure the battery is fully charged and operating correctly.

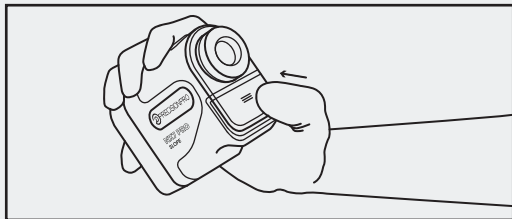


4. Double check that the battery door is on securely.

BEST PRACTICES

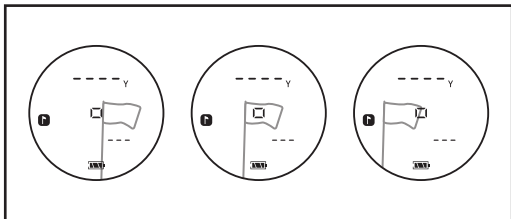

PAN OVER TARGET: For the best results, pan the crosshair over the target slowly as you measure the distance.

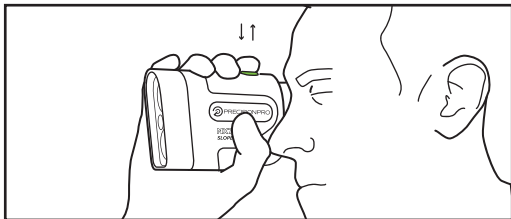


PRESS AND RELEASE: When measuring distances, it's important to press and then release the green power button.

Holding the button will not work correctly.



DON'T COVER THE LENS: Make sure the front of the rangefinder is unobstructed. A finger or side of the palm will interfere with the laser and result in inaccurate measurements.

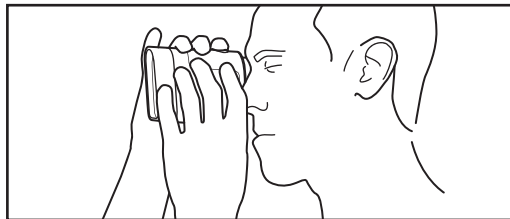

USE BOTH HANDS: Stabilize the rangefinder by using both hands and steady your arms by bracing them against your chest.

CONTACT US

(888) 568-6770

help@precisionprogolf.com

precisionprogolf.com